


SOCKET AND SLEEVE INSTALLATION INSTRUCTIONS

CONCRETE SLAB INSTALLATION

Pour Concrete - 150mm (W) / 300mm (D)

Existing Concrete

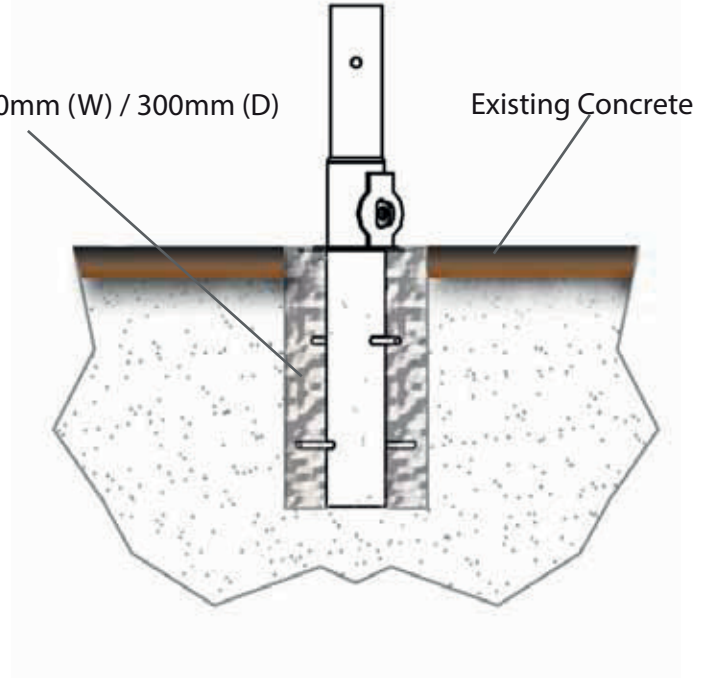


SOIL INSTALLATION

Soil / Dirt / Lawn

Pour Concrete - 300mm (W) / 500mm (D)

"Bell out" bottom of the hole

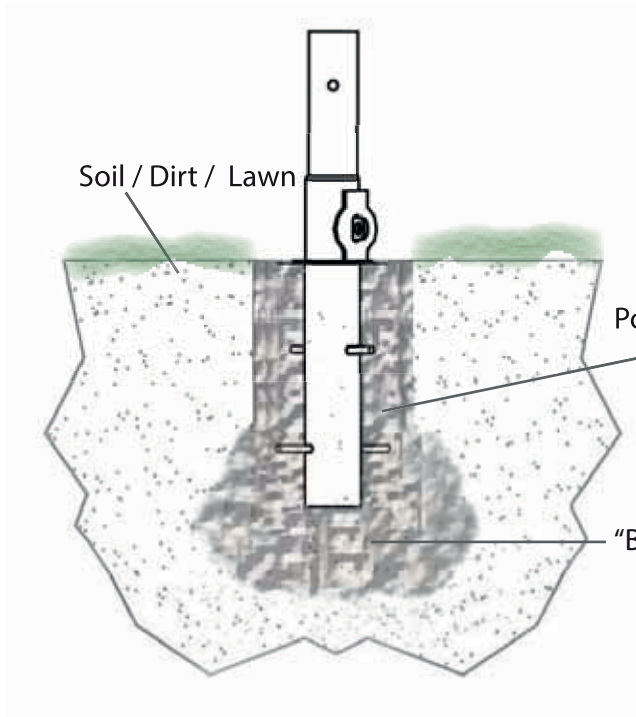

DECK INSTALLATION

Rout a 120mm circle into deck to make 'Sleeve' lid flush with deck surface.
Drill a 70mm hole to allow the "Sleeve" body to go through the decking.

Secure to deck support

Protruding ends of pins may need to be removed with a grinder to fit through 70mm deck hole

Brace end to deck or ground to prevent movement. Secure in at least two different directions at 90 degree to each other

